


Manual

Main features and Technical Parameters

1. Rated voltage: DC5V
2. Rated current: 1500mA
3. Speaker rated power: 2.5W
4. Light rated power: 1W
5. Bluetooth audio player
6. Bluetooth effective distance: $\geq 8M$
7. Stepless dimming
8. Built-in rechargeable lithium battery

Product Illustration

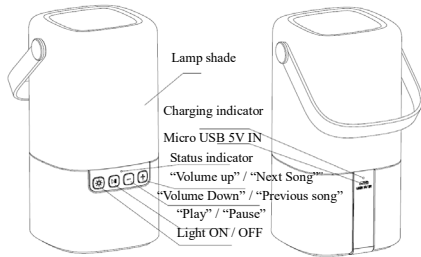

Key functions

No.	Current mode	Function operating	Button	Operation	Indicator
1	Power off	Power on	▶	Long press for 2 seconds	Bluetooth indicator is ON

2	Power on	Power off	▶	Long press for 2 seconds	Bluetooth indicator is OFF
3	Power on	Bluetooth pairing		Manually paired	Bluetooth status indicator flashes rapidly
4	Power on	Bluetooth pair successfully		Automatically paired	Bluetooth status indicator flashes slowly
5	Play mode	Volume up	+	Long Press	
6	Play mode	Volume down	-	Long Press	
7	Play mode	Previous song	-	Short Press once	
8	Play mode	Next song	+	Short Press once	
9	Play mode	Pause/play/mute	▶	Short press	
10	Any mode	Charging			Charging indicator is on
11	Any mode	Battery is full			Charging indicator is off
12	Any mode	Light ON/OFF	*	Short press	
13	Light on mode	Adjust brightness	*	Long press	Brighter or dimmer

Product charging

1. Connect DC 5V power with the Micro USB 5V for charging the built-in rechargeable lithium battery → the charging indicator is on. After fully charge → the charging indicator is off. Disconnect the charging plug → the charging indicator is off.

Bluetooth playback

1. Long press "▶" for 2 seconds → Bluetooth status indicator is ON.

The speaker makes a sound and bluetooth indicator flashes quickly.

2. Turn on your cell phone or Bluetooth device on the Bluetooth function, and search for devices in the Bluetooth menu.

3. When "Nordic Speaker" appears on the Bluetooth devices list, select "Nordic Speaker" to establish pairing and connection (if asked for a passkey, enter 0000). When the pairing and connection is successful, it produces a connected tone → bluetooth indicator flashes from quick to slow → short Press "▶" to play music.

4. If the pairing is overtime or the Bluetooth status indicator does not flash, please turn off the power and repeat step 1 to 3 for re-connection.

Light function

1. The product is with light function. Please short press "*" for Light ON/OFF, or long press "*" to adjust the dimmer function.

Troubleshooting

Failure Manifest	Solutions
The music is interrupted and the sound is interrupted	Low battery, please charge.
Fail to turn on	
Music intermittent in Bluetooth playback	Try to move the Bluetooth device close to the product or change the audio or equipment location.
Equipment cannot pair with Bluetooth audio connection	Low battery, please charge.
	Try to move the Bluetooth device closer to the speaker.
	Turn off & restart.
	Check your device has Bluetooth function.
	Try repeating Bluetooth Playback and set up steps.
Key failure	If paired with a computer, specify the "Nordic Speaker" multimedia speaker as the audio output device of the computer.
	Low battery, please charge.
Speaker volume is low or high	Turn off & restart.
	Long press the "+" or "-" key to the appropriate volume.

No output of emergency power supply	Low battery, please charge.
	The speaker is charging.

Cautions

1. The product is not waterproof, do not directly expose the product to the rain or immerse in water. The product should be kept away from fire and high temperature environment to avoid damage and explosion.
2. Please charge the speaker if you experience the following issues:
The bluetooth speaker disconnects and turns off.
The bluetooth speaker cannot be turned on.

The light will automatically turn off after a few minutes of lighting.

All of above indicates that the battery power is insufficient.

3. Please make sure the battery is fully charged before using the first time.

Packing Accessories

1. Micro USB cable x 1.
2. Instruction manual x1.

ENVIRONMENT

Do not dispose products marked with the symbol with the household waste. Return the product to your local recycling facility or contact your municipal office.

